


FUSE DETAILS

PASSENGER COMPARTMENT FUSE BOX

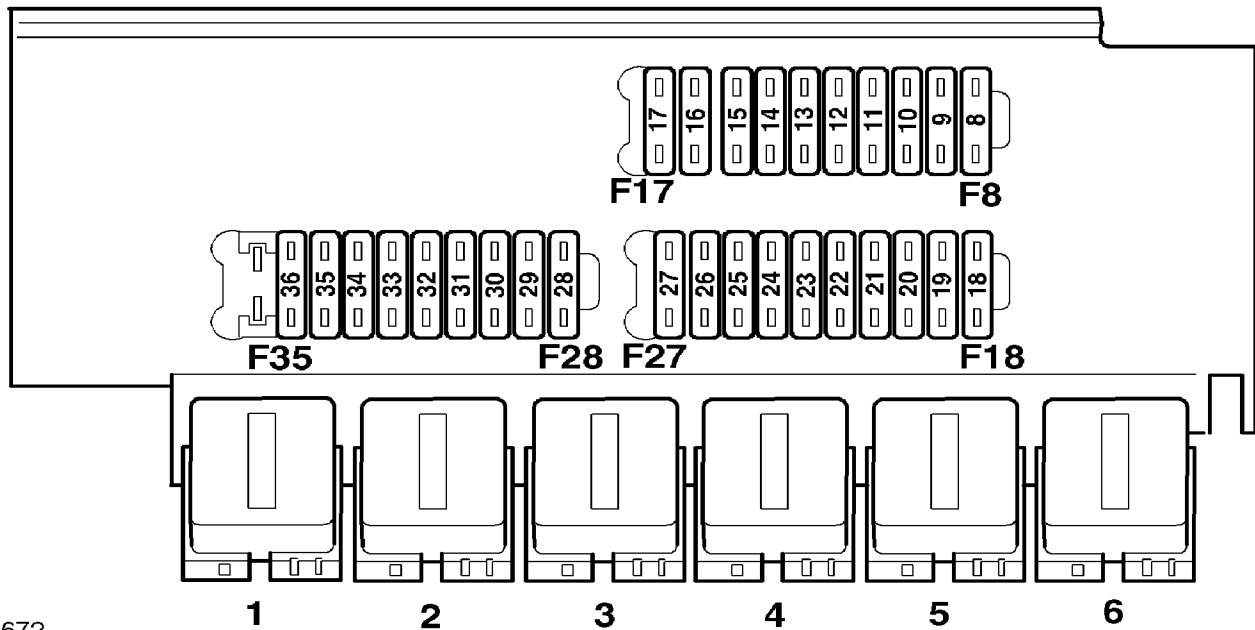

186 5672

1. Heated front screen relay
2. Starter motor relay
3. Heated rear window relay
4. Headlamp relay
5. Anti-theft alarm relay
6. Seat heat/window lift relay.

Fuse	Rating	Vehicle	Function
F8	10 A	All	Anti-theft alarm ECU, BBUS.
F9	15 A	All	Windscreen wiper delay ECU.
F10	10 A	All	Rear screen wiper relay.
F11	10 A	Td5	ABS ECU.
F11	10 A	300 Tdi	Not used.
F12	10 A	Td5	Engine Control Module.
F12	10 A	300 Tdi	Speed transducer.
F13	10 A	All	Brake pedal switch.
F14	10 A	All	Reverse lamp switch.
F15	5 A	All	Headlamp relay, dim dip relay, A/C compressor clutch relay, cooling fan relay, heated rear screen switch, instrument pack, ignition relay, heated front screen timer unit, blower motor relay, air conditioning unit.
F16	20 A	All	Blower motor.
F17	5 A	All	Radio/cassette player.
F18	10 A	All	RH front side lamp.
F19	10 A	130's only	LH front side lamp, LH tail lamp, instrument pack.
F19	10 A	90's and 110's only	LH front side lamp, trailer socket, instrument pack.
F20	10 A	All	RH front window switch, LH front window switch, cigar lighter, dim dip relay, headlamp levelling switch, RH headlamp levelling motor, LH headlamp levelling motor, RH heated seat switch, LH heated seat switch, rear fog lamp switch, radio/cassette player.
F21	10 A	All	Hazard warning switch.
F22	10 A	All	RH headlamp dipped beam bulb.
F23	10 A	All	LH headlamp dipped beam bulb.
F24	10 A	All	RH headlamp main beam bulb.
F25	10 A	All	LH headlamp main beam bulb.
F26	10 A	All	Rear fog lamp ECU.
F27	10 A	All	RH horn, LH horn, column switch.
F28	30 A	All	Blower relay.
F29	20 A	All	Cooling fan relay.
F30	10 A	All	Radio/cassette player, diagnostic socket.
F31	15 A	All	Hazard warning switch.
F32	20 A	All	Heated rear window relay.
F33	20 A	Td5	LH heated seat switch.
F33	20 A	300 Tdi	Not used.

FUSE DETAILS

Fuse	Rating	Vehicle	Function
F34	20 A	All	RH front window switch.
F35	20 A	All	LH front window switch.
F36	30 A	Td5	Heated front screen relay.
F36	30 A	300 Tdi	Not used.