

FUSE BOX DIAGRAM

ALFA ROMEO	AUDI	BMW	CHEVROLET	CHRYSLER	
CITROEN	DODGE	FIAT	FORD	HONDA	HYUNDAI
IVECO	JEEP	KIA	LAND ROVER	LEXUS	MAZDA
MERCEDES	MERCURY	MITSUBISHI	NISSAN		
OPEL/VAUXHALL	PEUGEOT	RANGE ROVER	RENAULT		
SUZUKI	TOYOTA	VOLKSWAGEN			

Fuses and relay Land Rover Discovery 3

For Land Rover Discovery 3 2004, 2005, 2006, 2007, 2008, 2009 model year.

Fuse box in engine compartment.


The engine compartment fuse box is located at the rear of the engine bay. To view the fuse box, the under-bonnet cover will have to be removed. The plastic lid of the box is removed by pressing the plastic tabs in.

ADS

Search

CATEGORIES

- Alfa Romeo
- Audi
- BMW
- Chevrolet
- Chrysler

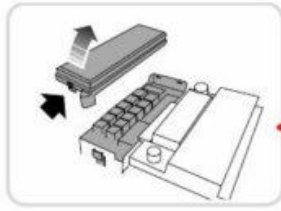

fusesdiagram.com

fuse box diagram.



- Citroen
- Dodge
- Fiat
- Ford
- Honda
- Hyundai
- Iveco
- Jeep
- Kia
- Land Rover
- Lexus
- Mazda
- Mercedes
- Mercury
- Mitsubishi
- Nissan
- Opel/Vauxhall
- Peugeot
- Range Rover
- Renault
- Suzuki
- Toyota
- Volkswagen

RECENT POSTS

- Fuses and relay
Lancer Evolution
2003-2007
- Fuses and relay
Mitsubishi Lancer
2000-2008
- Fuses and relay
Mitsubishi Grandis
- Fuses and relay
Mitsubishi Galant
1997-2004
- Fuses and relay
Mitsubishi Galant
1993-1997

legend.

R1	—
R2	Windscreen wiper intermittent relay
R3	Windscreen wiper motor relay
R4	Heated door mirrors/windscreen washer jet heater relay
R5	Fog lamps relay-front
R6	Engine control (EC) relay
R7	Suspension compressor motor relay
R8	Fuel pump (FP) relay
R9	Heated windscreen relay
R10	AC blower motor relay, rear
R11	—
R12	Headlamp wash/wipe relay
R13	Immobilizer system relay
R14	—
R15	Glow plug relay
R16	Engine coolant blower motor relay
R17	Glow plug relay
R18	Starter motor relay

- Fuses and relay
Mitsubishi Colt 2004-2012
- Fuses and relay
Mitsubishi Colt 1996-2004
- Fuses and relay
Mitsubishi ASX
- Fuses and relay
Mazda Tribute 2000-2007
- Fuses and relay
Mazda MPV 1999-2002

R19	—
F1	(25A) Fuel pump (FP)
F2	—
F3	(5A) Air suspension control module
F4	(25A) Engine management (Diesel)
F5	(10A) Engine management (petrol)
F6	(15A) Ignition coils
F7	(25A) Seat heater control module, driver
F8	(25A) Seat heater control module, rear
F9	(15A) Suspension roll correction valve
F10	(15A) Engine management (petrol), engine coolant blower motors
F11	(15A) Engine management
F12	(10A) Heated wind screen washer jets
F13	(10A) Engine management (petrol), variable valve lift control module, fuel pump (FP)relay
F14	(20A) Engine management
F15	(30A) Heated windscreen
F16	(10A) Heated door mirrors
F17	(15A) Engine management (petrol)

F18	(30A) Heated windscreen
F19	(15A) –
F20	(5A) Alternator
F21	–
F22	(30A) Heater blower motor (rear)
F23	(25A) Electronic stability program (ESP)
F24	(20A) Vacuum pump
F25	(10A) Headlamp switch
F26	(20A) Air suspension
F27	(5A) Engine control module (ECM)
F28	(20A) Auxiliary heater
F29	(30A) Wind screen wash/wipe system
F30	(10A) Automatic transmission (AT)
F31	(50A) Glow plugs
F32	(30A) Fog lamp switch
F33	(30A) Transfer box range selection motor
F34	(50A) Glow plugs
F35	–
F36	(30A) Trailer socket

F37	(30A) Headlamp washer
F38	(30A) Electronic parking brake
F39	(40A) Electronic stability program (ESP)
F40	(60A) Air suspension
F41	(30A) Immobilizer
F42	(40A) Engine coolant blower motor
F43	(40A) Differential lock actuator
F44	(40A) Starter motor
F45	(40A) Indicators
F46	(40A) Reversing lamps
F47	(50A) –
F48	(50A) –
F49	–
F50	–

Fuse box in passenger compartment Land Rover Discovery 3.

The passenger compartment fuse box is fitted behind the glovebox. To access the fuses, open the glovebox to the service position. This is done by opening the glovebox normally and then pinching the top of the support stays located either side of the hopper. This allows the glovebox to be lowered into the

footwell. A label on the rear of the glovebox hopper shows the circuits protected, the fuse values and their locations.

fuse box layout.

1	Auxiliary power socket relay
2	
3	Cigarette lighter relay
4	

5	Multimedia control module relay
F1	(10A) Interior lamps, glove box lamp, vanity mirror lamps
F2	(10A) Side/tail lamps, right
F3	(10A) Interior lamps
F4	(10A) Side/tail lamps, left
F5	(10A) Reversing lamps
F6	(10A) Reversing lamps (trailer)
F7	(25A) Electric window, driver's side
F8	(30A) Trailer socket(battery)
F9	(5A)Airbags/SRS
F10	
F11	(10A) Wind screen washer pump
F12	(15A) Horn(s)
F13	(25A) Heated rear window
F14	(10A) Side/tail lamps (trailer)
F15	(15A) Stop lamps, stop lamps switch
F16	(10A) Retractable door mirrors
F17	(20A) Electric window motor, rear right
F18	(5A) Rain sensor/ambient light sensor

F19	(15A) Auxiliary power socket 2
F20	(15A) Sunroof
F21	(25A) Electric window motor, passenger
F22	(10A) Trailer socket (ignition)
F23	(5A) –
F24	(5A) Transfer box
F25	(5A) Engine control module (ECM)
F26	(5A) Alarm system siren
F27	(10A) Automatic headlamp adjustment
F28	(5A) Ignition main circuits relay
F29	(30A) Electric seat (passenger)
F30	–
F31	(20A) Electric window motor, rear left
F32	(15A) Rear fog lamp
F33	(5A) Electric door mirrors, transmission selector lamp, electric seat (passenger)
F34	(15A) Auxiliary power socket 1
F35	(5A) Suspension control module
F36	(5A) Type pressure monitoring system, parking aid control module

F37	(5A) Electronic stability program (ESP)
F38	(15A) Front fog lamp
F39	(5A) Instrument panel
F40	(5A) Ignition key 'in 'warning buzzer
F41	(5A) Electronic parking brake
F42	(30A) Audio unit amplifier
F43	(10A) Central locking signal sensor, type pressure monitoring system
F44	(5A) Transmission gear position switch
F45	—
F46	(30A) Driver's seat
F47	(15A) Auxiliary power socket 3
F48	(15A) Windscreen wiper motor
F49	(30A) Central locking
F50	(10A) Fuel filler flap solenoid
F51	(10A) Climate control
F52	(5A) Telephone, traffic information control module
F53	(15A) DVD player
F54	(5A) Electric seat memory

F55	(15A) Cigarette lighter
F56	(10A) Automatic headlamp adjustment
F57	(10A) Multimedia control module (rear)
F58	(10A) Telephone, multimedia control module, television tuner
F59	(10A) Cool box
F60	(5A) Engine control module (ECM) (start signal)
F61	(10A) Automatic headlamp adjustment
F62	(5A) Headlamp low beam
F63	(10A) Data link connector (DLC)
F64	(5A) Automatic transmission (AT)
F65	—
F66	(5A) Hill descent control (HDC) switch, steering position sensor, brake pedal position (BPP)switch, ESP master switch
F67	(5A) Automatic lighting control module
F68	(5A) Instrument panel
F69	(5A) Anti-dazzle interior mirror

The supplementary fuse box that protects the tow hitch circuits, is located behind the left-hand panel in the luggage compartment.

F1	(7,5A) Stop lamps
F2	(15A) Ignition switch
F3	(15A) Battery power distribution
F4	(7,5A) Rear fog lamps
F5	(5A) Tail lamp, right
F6	(5A) Tail lamp, left, licence plate lamp

Tags: [Fuse box diagram Range Rover](#)

Related Posts

Fuses and relay
Land Rover
Discovery 2

Fuses and relay
Land Rover
Discovery 4

Fuses and relay
Land Rover
Freelander